


①


UNSCREW SCREWS WHICH HOLD WOODEN BATTEN AND  
INSTALL BATTEN ONTO THE WALL

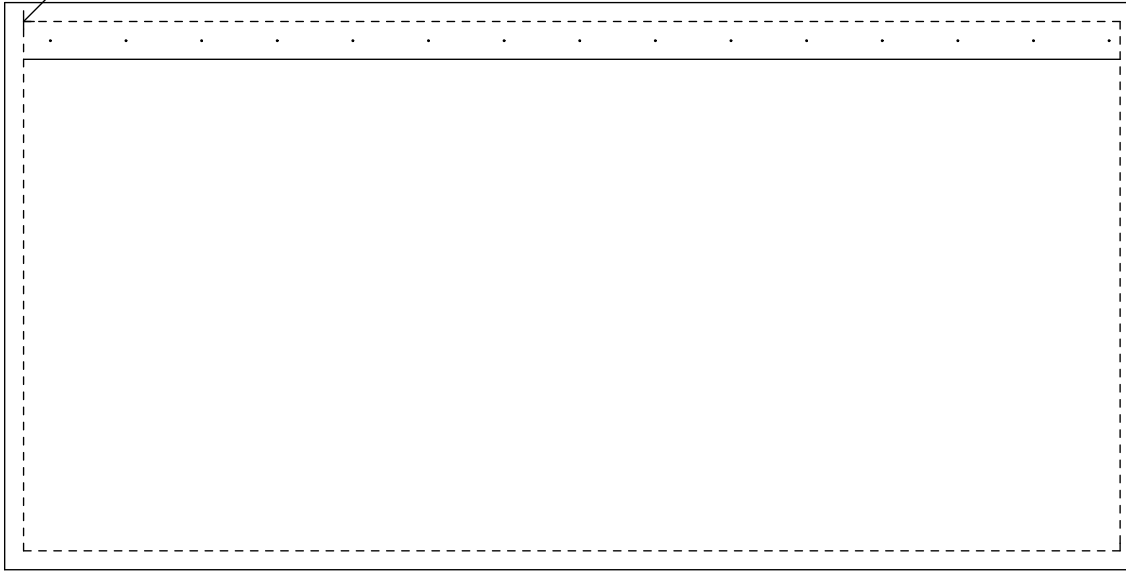

BACK VIEW OF BEDHEAD

BATTEN ON WALL

BEDHEAD



③

LIFT BEDHEAD ONTO BATTEN WHICH HAS  
BEEN ATTACHED TO THE WALL TO PROVIDE A  
FLUSH AND SECURE FIT

②

SCREW BATTEN TO WALL INTO  
STUDS WITH SCREWS

